

Hardware

 
(Drawn to Scale)

Fan Parts

(Not Drawn to Scale)

PARTS GUIDE

Hunter

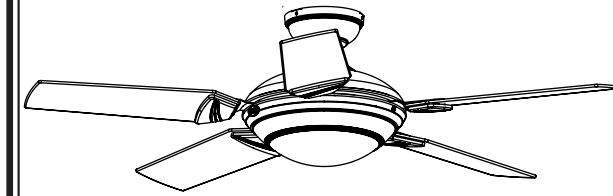 



 
 
 

 
 

 
 





Using this Parts Guide, make sure all parts are included in the box. If parts are missing, DO NOT RETURN

THIS ITEM TO THE STORE, call 888-830-1326 for assistance.

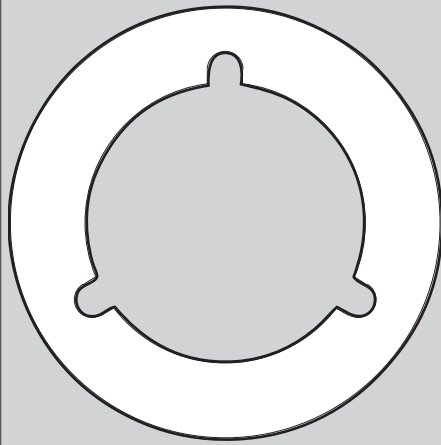THIS PARTS GUIDE IS FOR REFERENCE ONLY.

REFER TO THE INSTALLATION MANUAL FOR FULL ASSEMBLY INSTRUCTIONS.

 
-  **x 1** Low Profile Washer
-  **x 2** 3" Wood Screw
-  **x 4** Flat Washer
-  **x 2** 1.5" Wood Screw
-  **x 3** Low Profile Screw
-  **x 3** Canopy Screw
-  **x 1** Set Screw
-  **x 3** Mounting Isolator
-  **x 11** Screw, Blade Iron Armature
-  **x 16** Screw, Blade Assembly
-  **x 16** Blade Grommet
-  **x 3** Screw, Decorative
-  **x 9** Screw, Machine, 8-32
-  **x 1** Balancing Kit
-  **x 8** Wire Connector

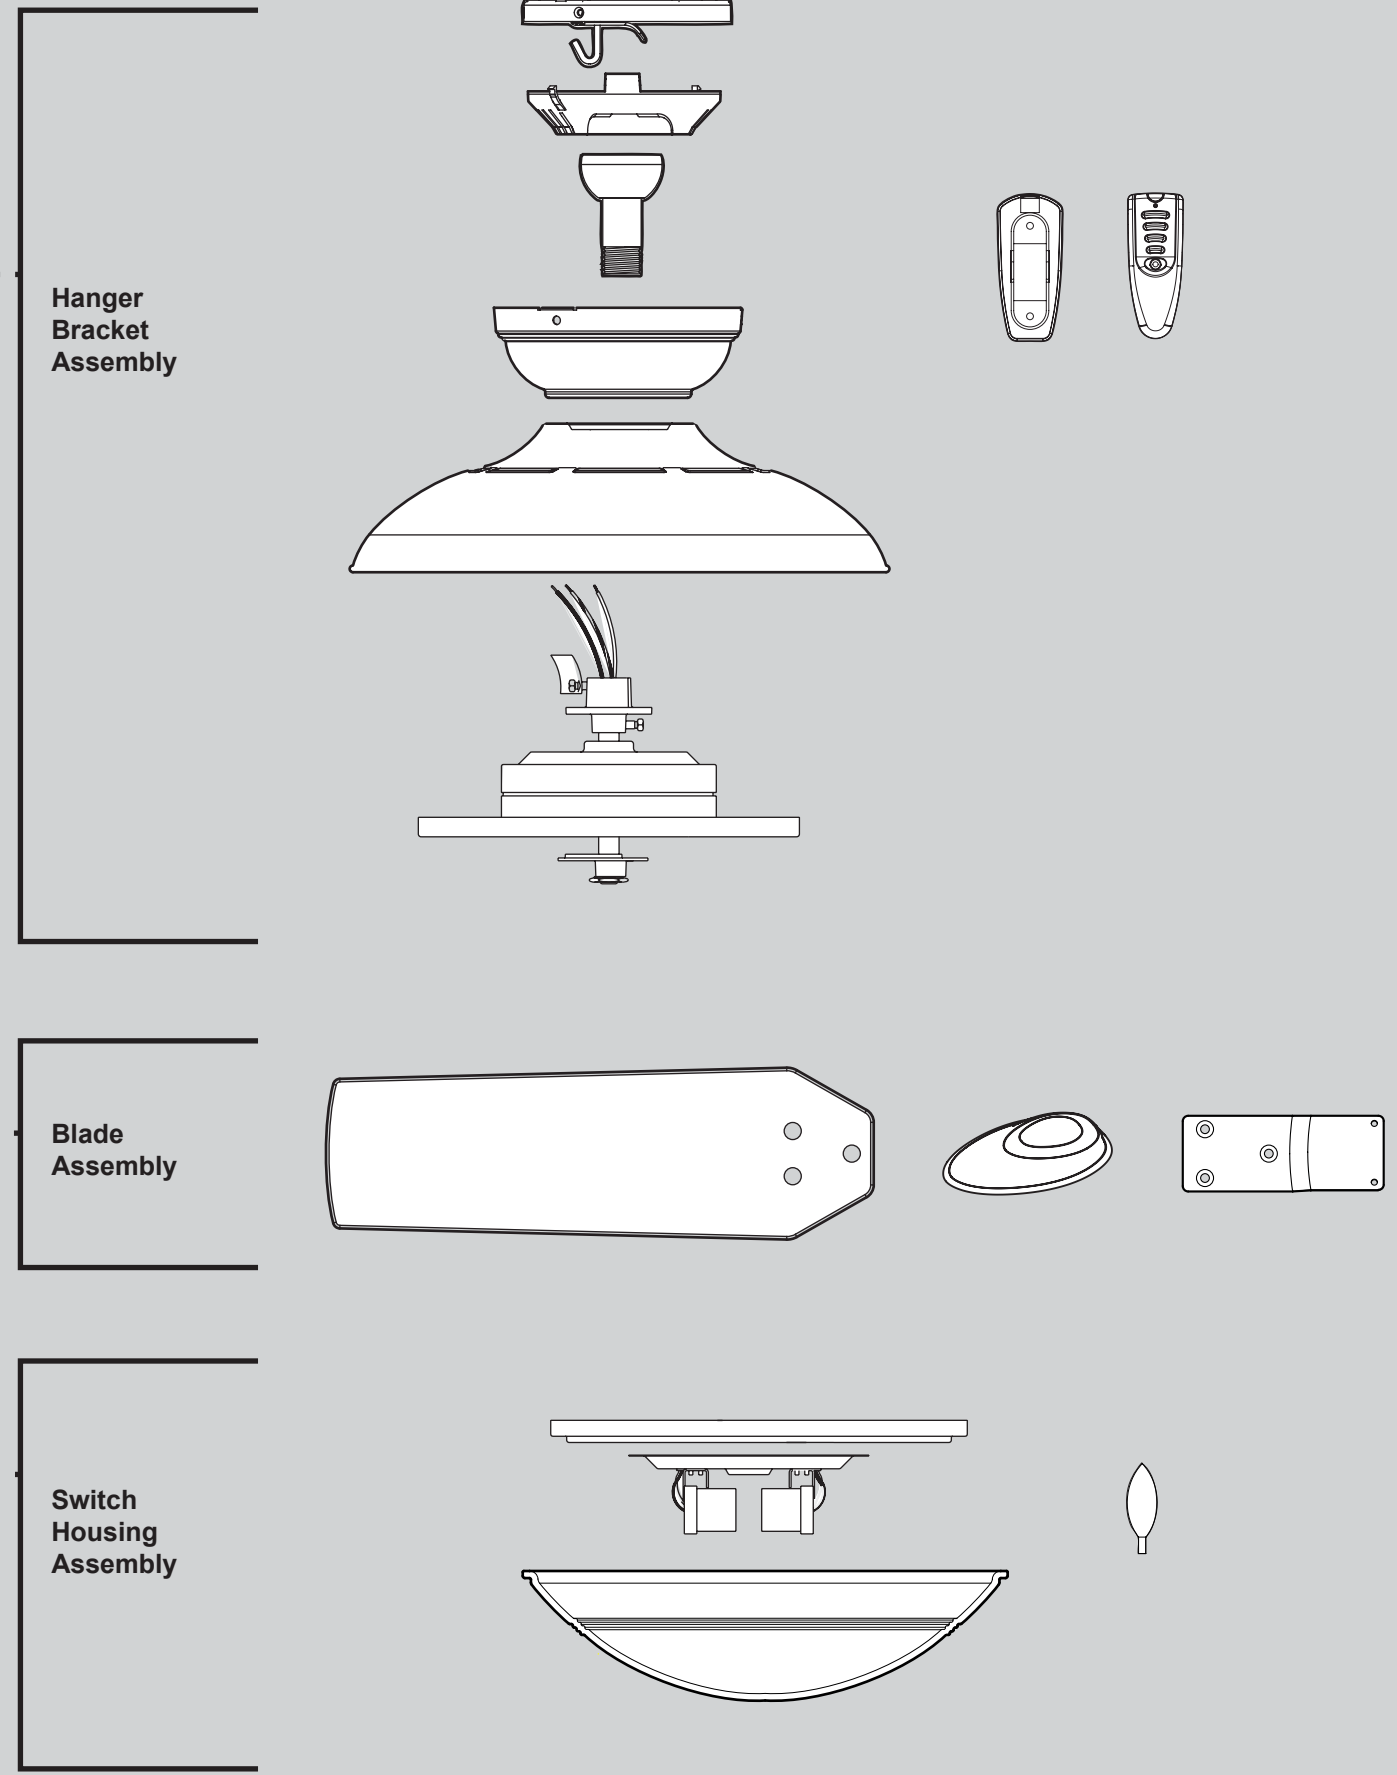

Parts List		
	Model #	21872
	Asm. Dwg. #	97691-01
	Finish	Amber Bronze
Item Name	Qty	Part #
Hanging System Kit		
Ceiling Plate	1	92356-01
Canopy	1	84206-01
Hanger Ball / Downrod Assembly	1	74229-03
Setscrew	1	03009-01
Low Profile Washer	1	73788-01
Canopy Screw	3	74510-03
Wood Screw	2	03144-03
Wood Screw	2	06512-02
Flat Washer	4	06301-01
Mounting Isolator	3	63731-01
Screw, Low Profile	3	74508-07
Housing, Top	1	92647-01
Blade Iron Set	1	84207-05
Blade Set	1	75885-68
Blade Medallion Set	1	97088-05
Screw, Blade Iron Armature	11	74510-04
Hardware Kit	1	97691-00-860
Blade Grommet		
Blade Assembly Screw		
Machine Screw 8-32		
Wire Connector		
Balancing Kit	1	07570-01
Screw, Decorative	3	73985-01
Remote Control Receiver	1	85483-01
Remote Control Transmitter	1	85094-02
Remote Control Cradle	1	85093-01
Light Kit Top Housing	1	92650-02
Light bulb / Bulb	2	77646-04
Globe/Shade	1	87371-01


Materiales

 (no dibujados a escala)

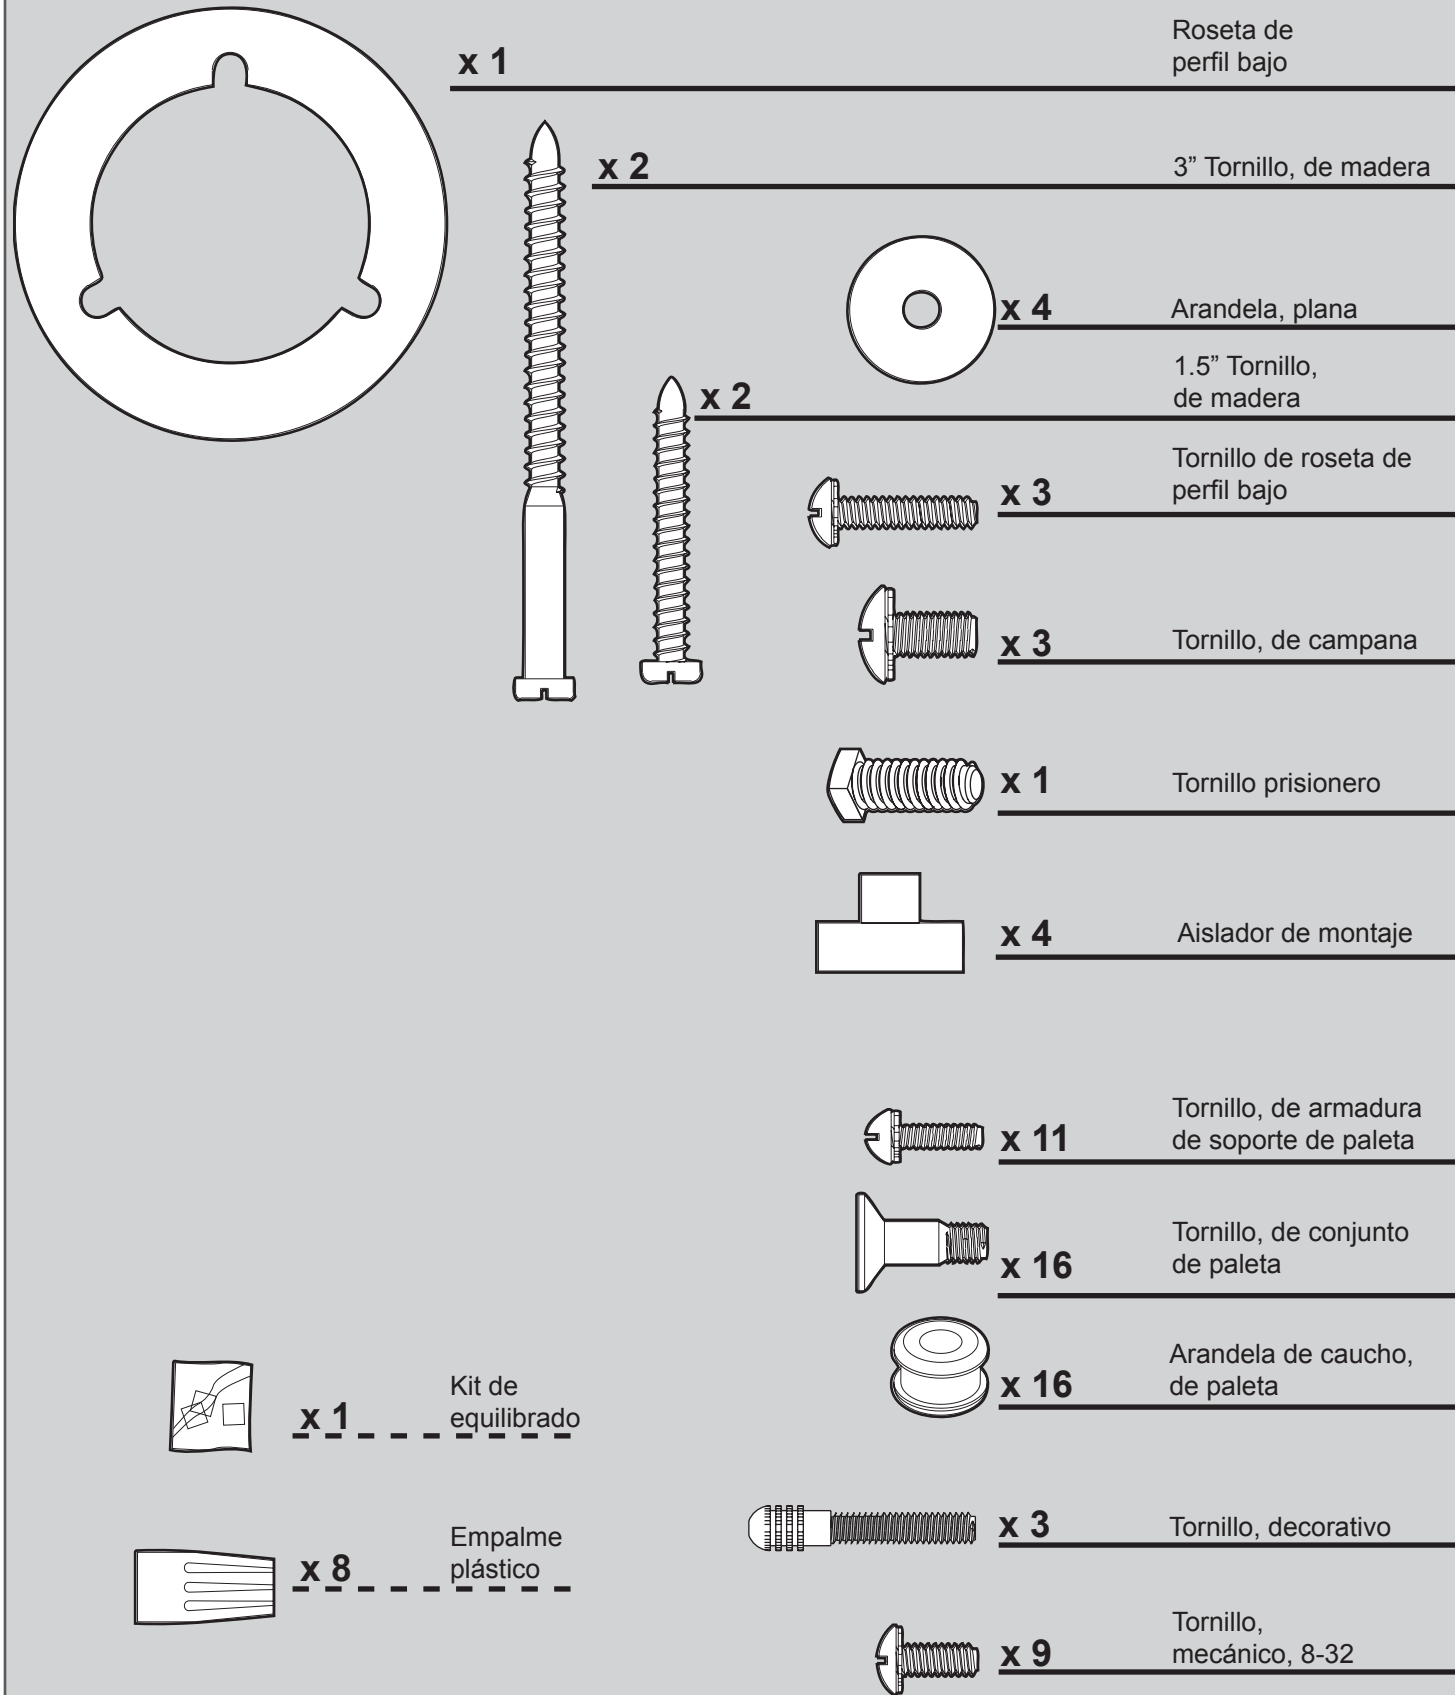

Piezas del ventilador

 (no dibujadas a escala)

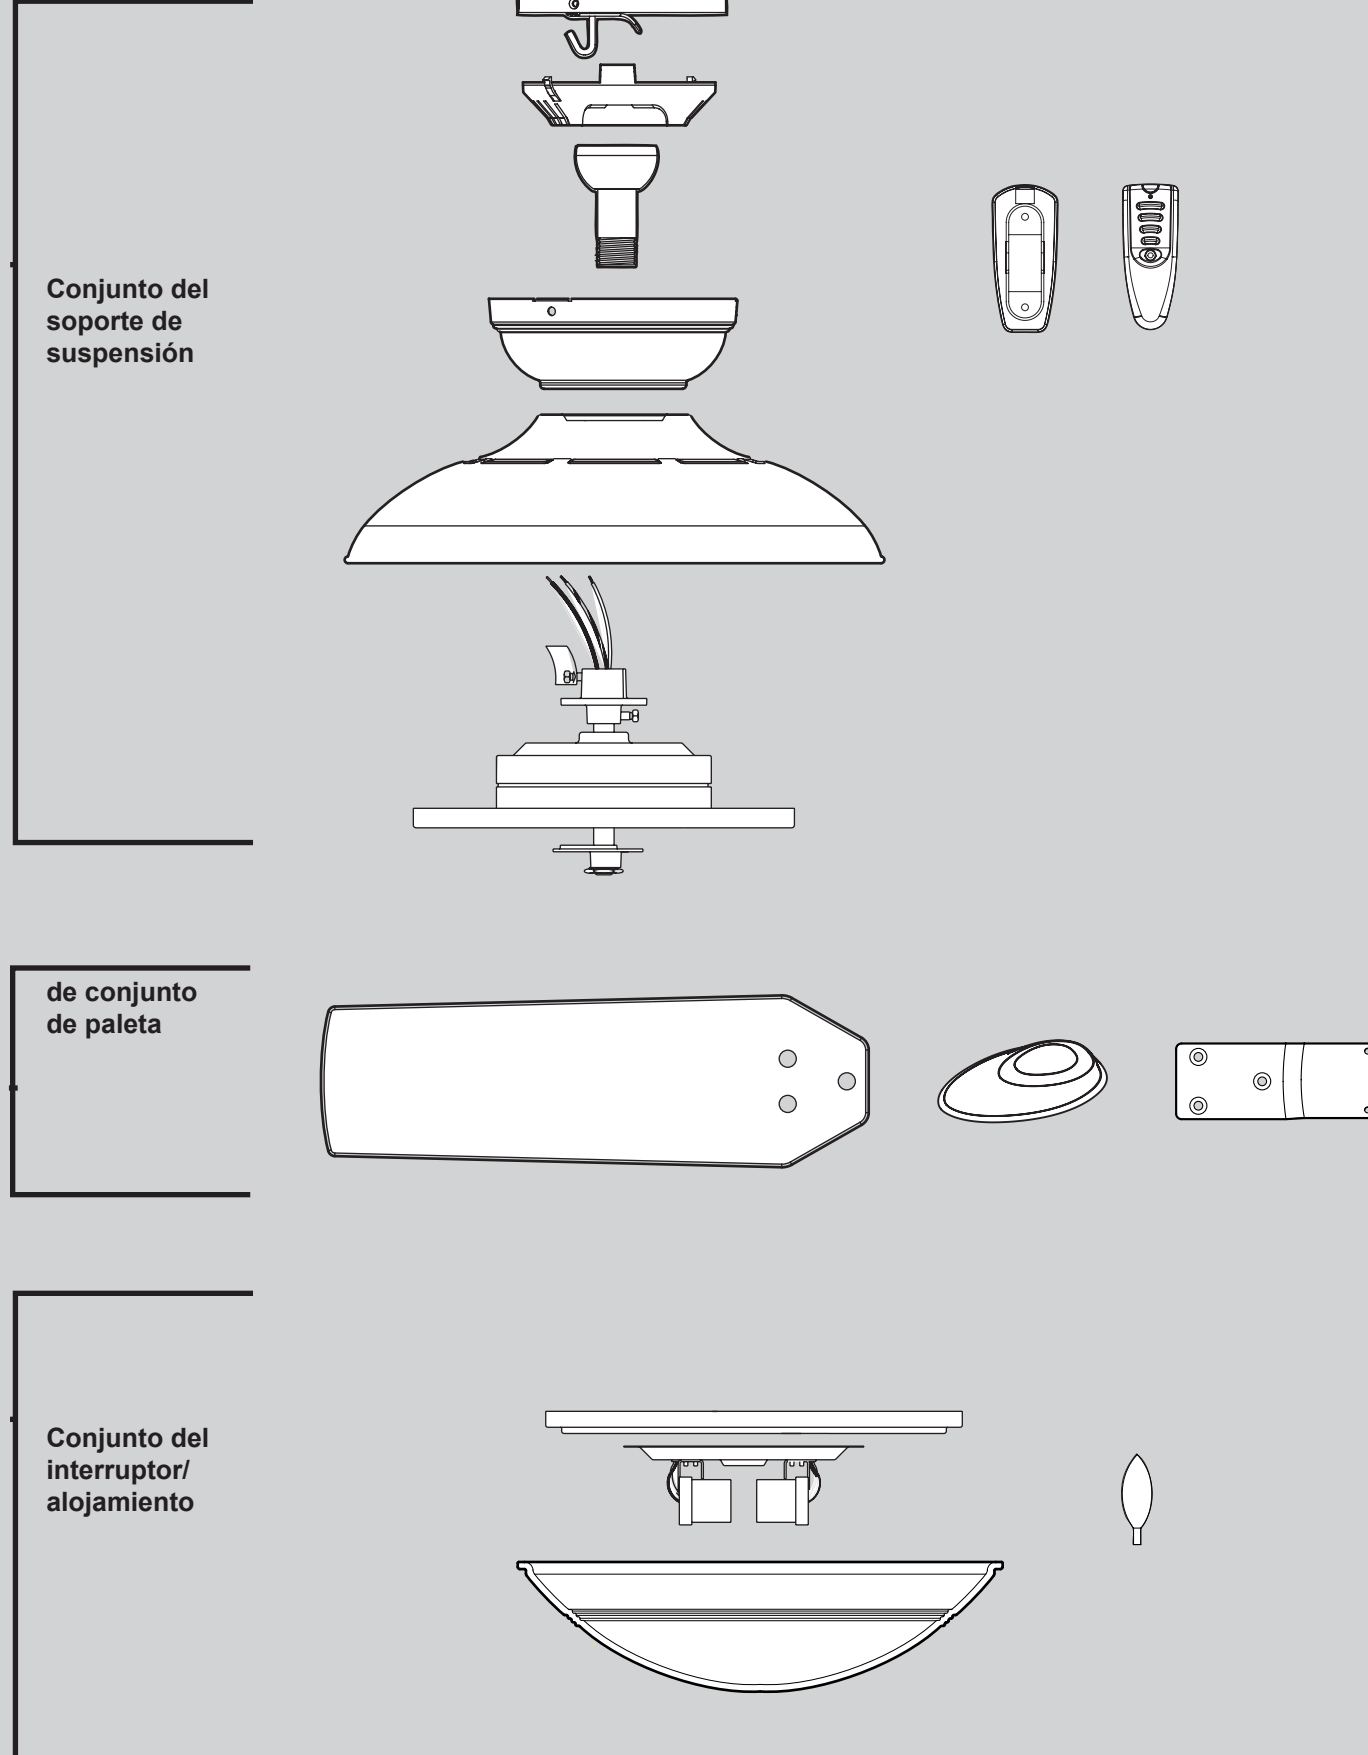


GUÍA DE PIEZAS



Hunter

 Consulte esta Guía de partes para asegurarse de que todas las partes estén incluidas en la caja.

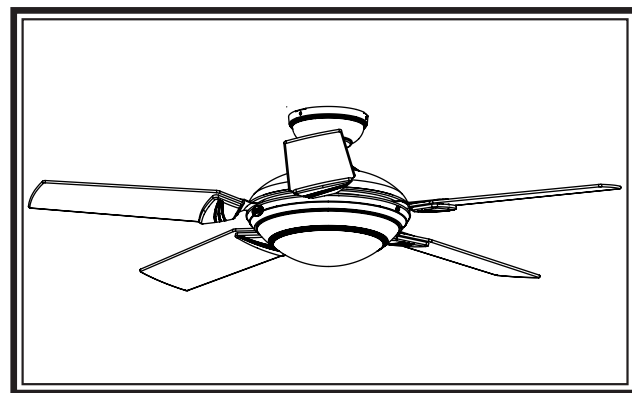

Si falta alguna parte, **NO DEVUELVA ESTE PRODUCTO A LA TIENDA. Solicite ayuda al 888-830-1326. ESTA GUÍA DE PARTES SOLAMENTE ES REFERENCIAL. CONSULTE LAS INSTRUCCIONES COMPLETAS DE ENSAMBLAJE EN EL MANUAL DE INSTALACIÓN**

Lista de piezas

Nombre del ítem	No. del modelo	21872
	No. del dibujo de ensamblaje	97691-01
	Acabado	Bronze Ambre
Nombre del ítem	Cantidad	No. de la pieza
Kit del sistema de suspensión		
Placa de techo	1	92356-01
Campana	1	84206-01
Bola de suspensión / Conjunto de varilla	1	74229-03
Tornillo prisionero	1	03009-01
Roseta de perfil bajo	1	73788-01
Tornillo, de campana	3	74510-03
Tornillo, de madera	2	03144-03
Tornillo, de madera	2	06512-02
Arandela, plana	4	06301-01
Aislador de montaje	3	63731-01
Tornillo, de roseta de perfil bajo	3	74508-07
Alojamiento, Parte superior	1	92647-01
Juego de soporte de paletas	1	84207-05
Juego de paletas	1	75885-68
Medallón de la paletas	1	97088-05
Tornillo, de armadura de soporte de paleta	11	74510-04
Kit de materiales	1	97691-00-860
Arandela de caucho, de paleta		
Tornillo, de conjunto de paleta		
Tornillo mecánico 8-32		
Empalme plástico		
Kit de equilibrado	1	07570-01
Tornillo, Decorativo	3	73985-01
Receptor de control remoto	1	85483-01
Transmisor de control remoto	1	85094-02
Soporte de control remoto	1	85093-01
Alojamiento superior de kit de luz	1	92650-02
Bombilla	2	77646-04
Globo / Pantalla	1	87371-01